


WALKWAY PAV. NOTES:
 1. IF SALVAGEABLE, REMOVE EXISTING PAVEMENT TO RECEIVE NEW WALKWAY. REMOVE EXISTING WALKWAY IN AREAS TO BE WALKWAY. NEW WALKWAY PAV. LOCATIONS TO BE DETERMINED AT END OF PROJECT.

LEGEND:

- 1 EXISTING DOUBLE ROOF DRAIN REMAINS.
- 2 INSTALL NEW ROOF DRAIN, SEAL & CONNECT TO NEW EXTENSION OF EXIST. DRAIN PIPE.
- 3 REMOVE EXISTING PIPE FLASHING, INSTALL NEW PIPE FLASHING & SEAL.
- 4 EXISTING ELECTRIC BOX ON 6" x 8" BASE FLASH & SEAL.
- 5 1" PIPE FLASH & SEAL.
- 6 2" PIPE FLASH & SEAL.
- 7 REMOVE INSULATION & PROVIDE SLOTTED SUPPORT WHERE BECK IS CUT, APPROX. 4 SQ. FT.; REPLACE INSULATION.
- 8 3" VENT STACK, FLASH & SEAL.
- 9 3 1/2" VENT STACK W/ BOOT, FLASH & SEAL.
- 10 PROVIDE WATER-TIGHT FLASHING DETAIL AT WINDOWS.

SYMBOLS:

TEAR OFF: REMOVE EXIST. MEMBRANE & TAPERED INSULATION. REINSTALL NEW RIGID INSULATION BOARD (3" MIN.) TAPERED TO DRAINS AT 1/4" / FT.

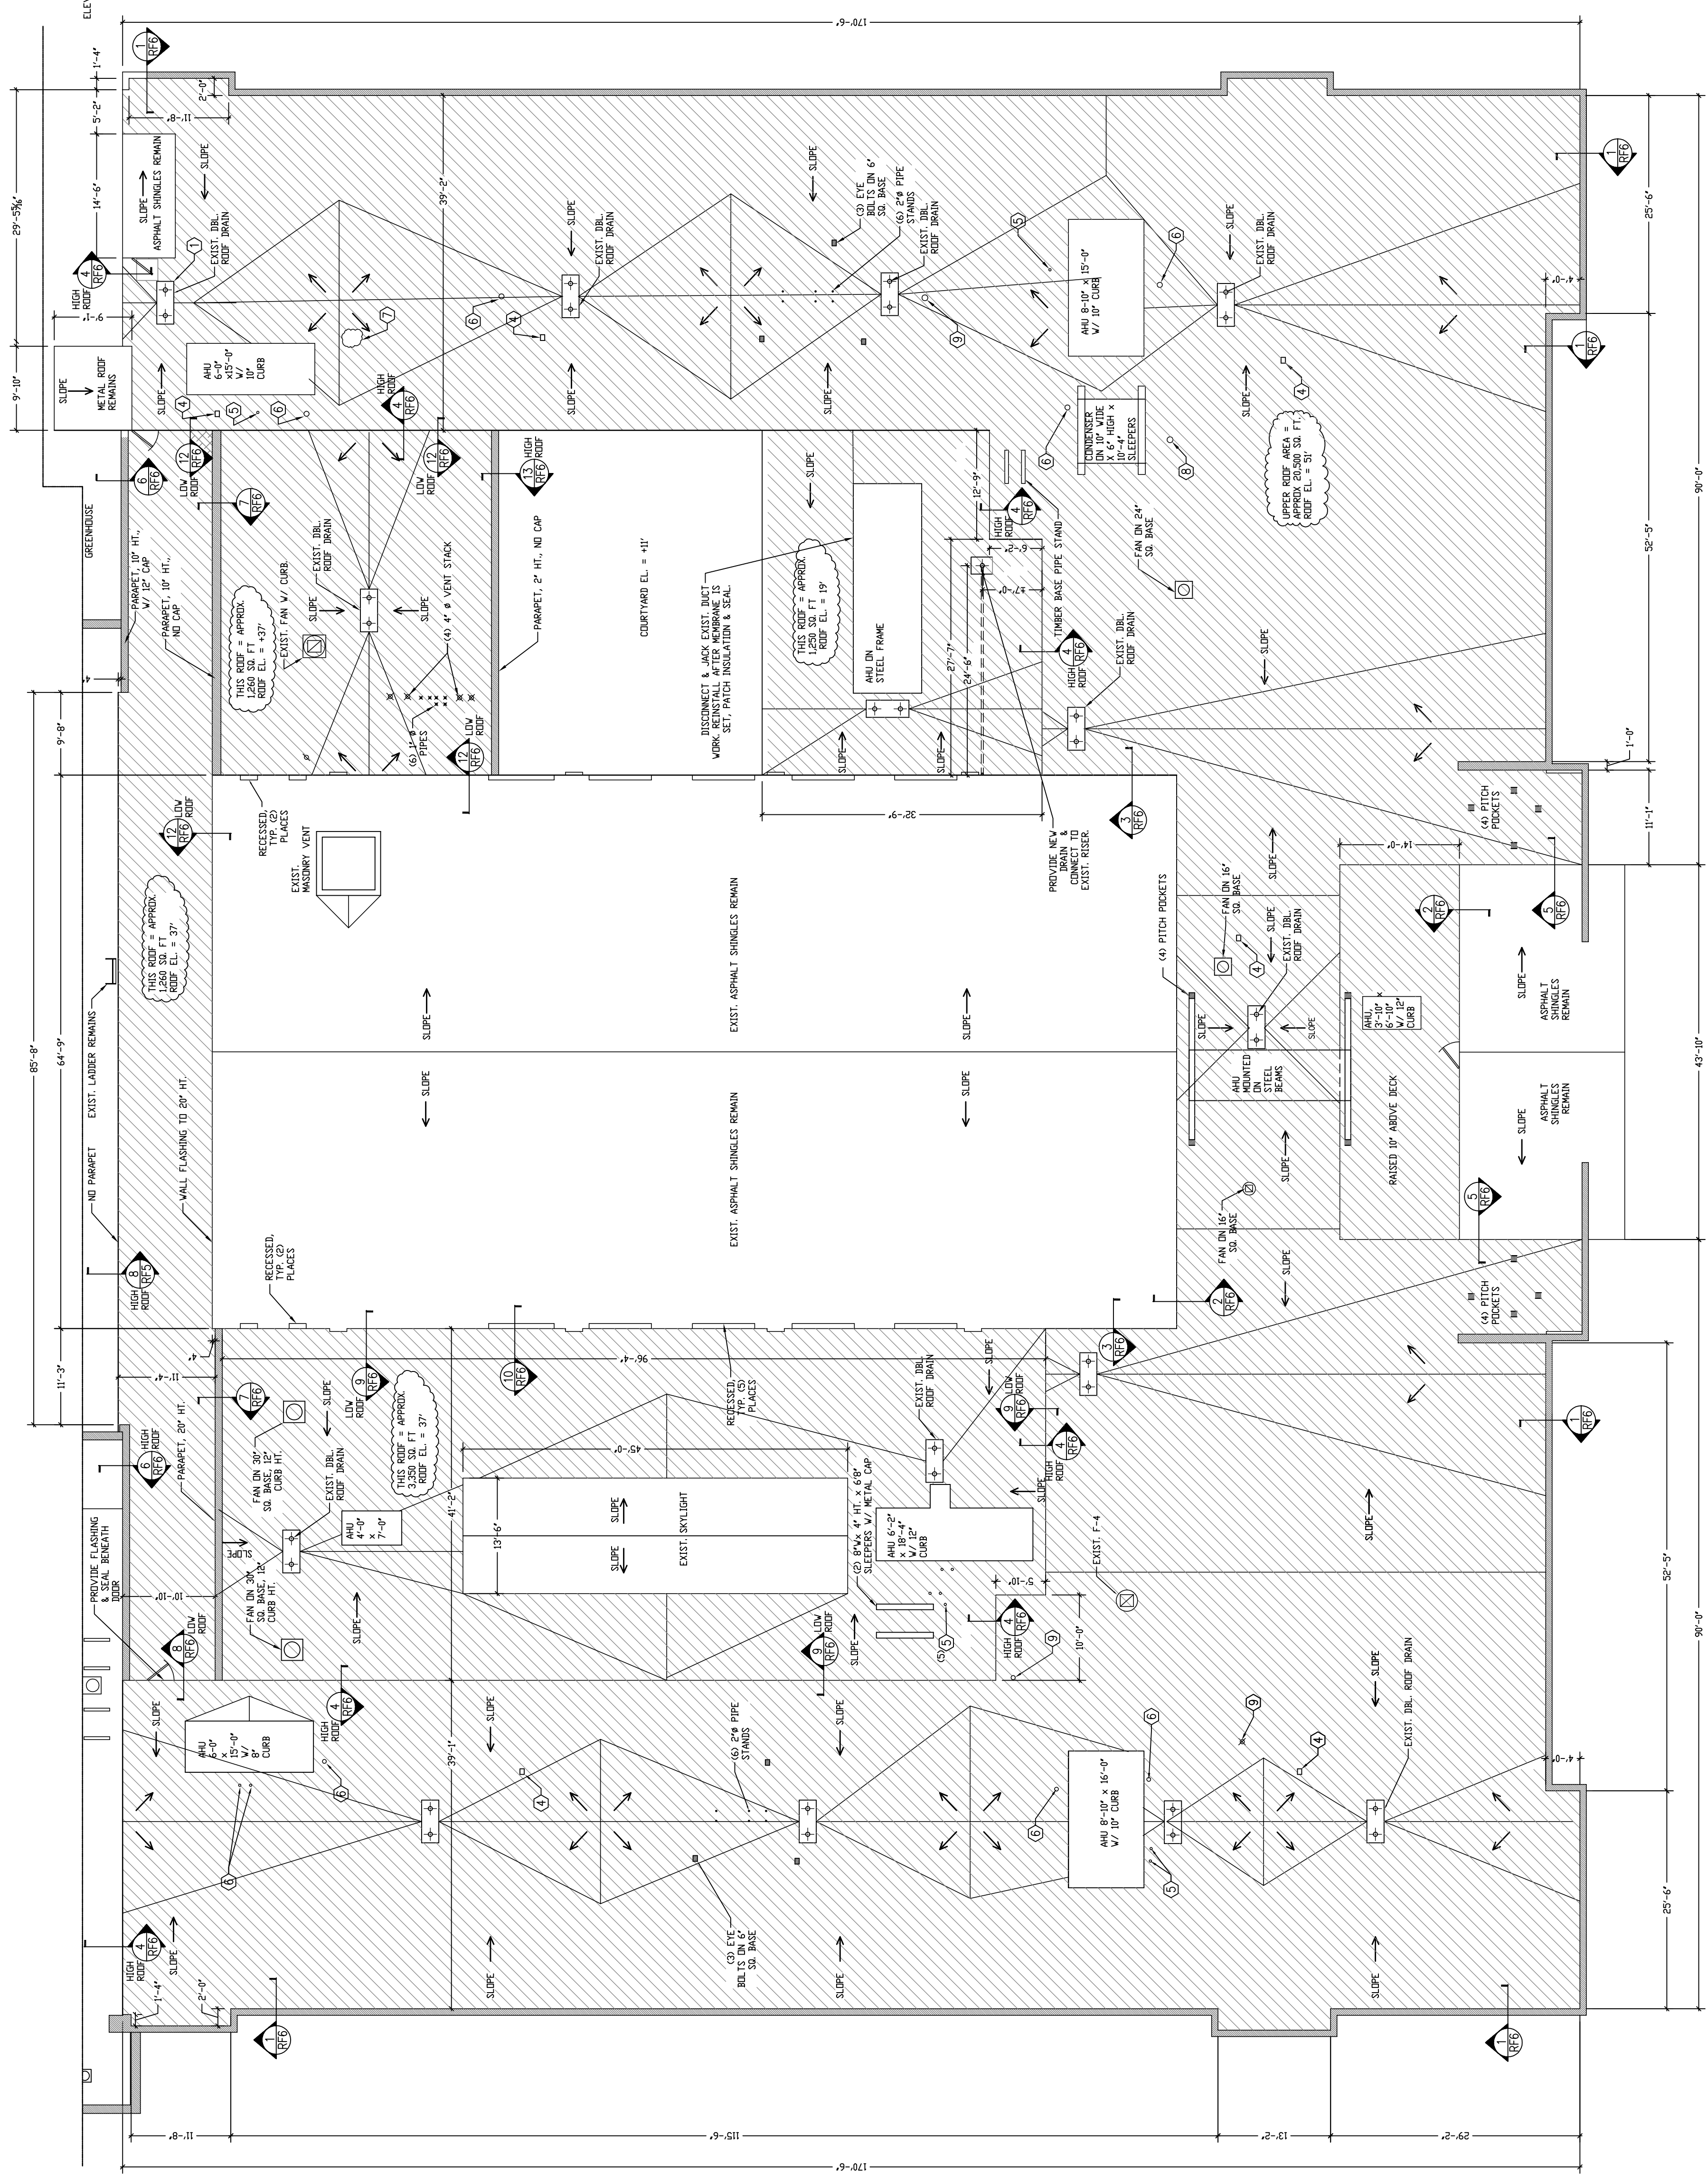

1 PARTIAL ROOF PLAN
 RF 4 3/8" = 1'-0"